LED-FGI544-E

INSTALLATION INSTRUCTIONS



LORO-R // LORO-Q



 
inter-lux.com

LORO-R/Q: 18W/25W

 
c CLISTED





LORO-R/Q: 8W/13W









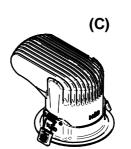


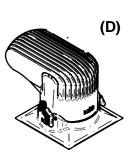

ISTRUZIONI / INSTRUCTIONS / INSTRUCTIONS / HINWEISE / INSTRUCCIONES

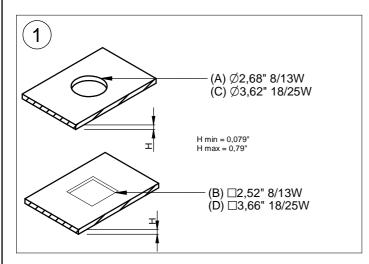

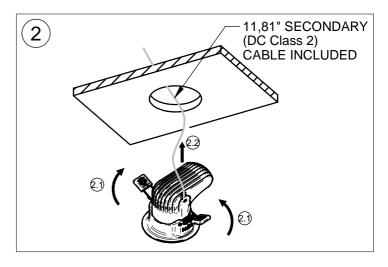

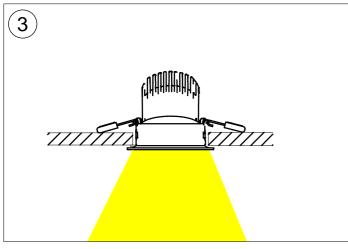

INSTALLATION SEQUENCE

- Cut correct size opening in ceiling [1]
- Mount remote driver in accessible well ventilated space
- Ensure power is off before connecting driver to line voltage
- Connect secondary wiring to fixture wiring
- Turn the springs and insert the article into the ceiling opening [2]
- WARNING Be sure secondary wiring is connected to driver BEFORE energizing to avoid LED failure
- Energize

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

MOUNTING INSTRUCTIONS

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLING FIXTURES

- · CAUTION: USE ONLY WITH CLASS 2 POWER UNIT
- · Keep all of the instructions for future reference
- · Turn off power before installing fixture
- · Installation is to be performed by a qualified electrician only
- · All installations must conform to the National Electrical Code as well as all local jurisdictional codes and regulations
- · Any modification of the luminaire will void any and all written or implied warranties
- · The manufacture accepts no responsibility for damage to persons or property airing through improper use or installation