


Step 1 - Confirm Power Supply is Off!

Cut-Out

Unpack luminaire unit. Unit ships in **two** major parts: Fixture Insert/Driver Box Assembly, and Lens/Cover unless Remote Driver version was supplied, then Plenum-rated cable with bare leads is provided. In this configuration, integral conduit and driver box are not included. However, a strain relief is added to where the low voltage wires exit. Remote drivers and housings are supplied by Inter-lux.

Inside Trim

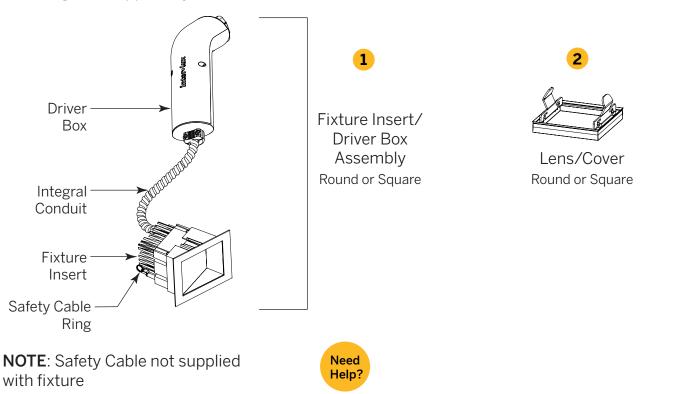

whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.



Cut-Out

Step 2 - Ceiling Preparation

Cut appropriate size opening in the ceiling as shown below. Clear any insulation at least 3" from any part of the fixture or driver enclosure.

NOTE: Before Installation in dry location, remove supplied Gasket. For wet location, remove backing paper from the Gasket, expose adhesive and apply Gasket to inside trim.

a Locate Fixture Insert/Driver Box assembly. b Remove Driver Box Cover. Driver Loosen Cable Strain Relief Box Cover Bracket(s) and Hex Screws. Remove (unscrew) Knock-outs as necessary. • **NOTE:** Illustrations show conduit exiting from ceiling. This may not be the case in your installation. **Driver Box**

> 410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.

whitegoods

Step 3 - Wiring


Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim

Page 2

updated 05.2024



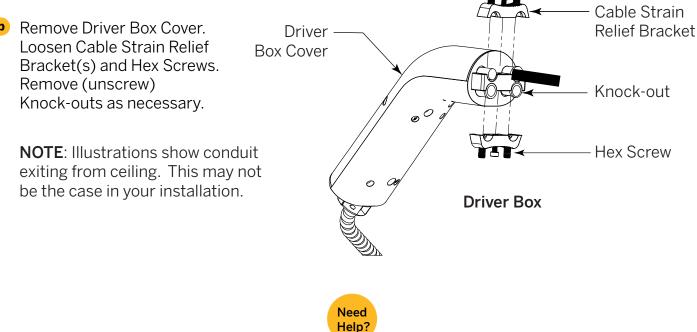

Gasket

Backing Paper

3" ProTools WG-75RPTAWW-RBT WG-75SPTAWW-SBT

Installation Instructions

3" ProTools WG-75RPTAWW-RBT WG-75SPTAWW-SBT Installation Instructions

Downlight

Page 3

Round and Square Accent Wall Wash Recessed Bezel Trim

Step 4 - Wiring (continued) Connect the Power Feed Cable to the Black (L), White (N) and Green (Gnd) Terminals. Connect the Control Wires, if applicable. Driver Box Driver Box Connected to Connected to Conduit Romex **Control Wire Entry Control Wire Entry** D D ŧ٧, Х, S 2, UL \$ 2, UL \mathbf{O} Ð **Power Feed Entry** Power Feed Entry WAGO WAGO Romex Conduit Slots Slots **Interior View** of Driver Box To connect to driver box, If Romex is used, fasten incoming conduit set screws to secure must be Trade Size 3/8 in addition to closing strain relief bracket. However, this size conduit cannot enter driver box. Use 7/64" allen key to fix set screws. It is held in place by Cable Strain Relief Bracket only. **Refer to Driver Wiring Instructions** for other control protocols



whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.



3" ProTools WG-75RPTAWW-RBT WG-75SPTAWW-SBT

Installation Instructions


Downlight Round and Square

Accent Wall Wash Recessed Bezel Trim

Page 4

Step 5 - Fixture Orientation


Orient Fixture Insert such that wall wash lens cover faces wall surface.

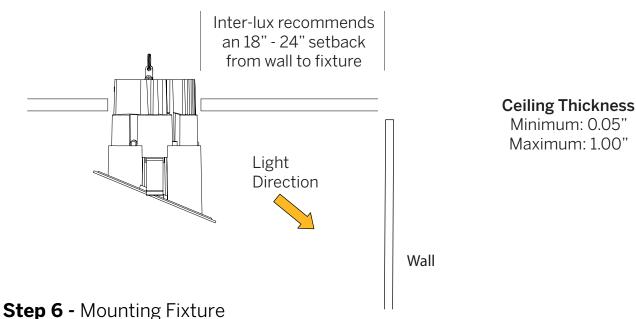

Compress trim springs against housing

b Push fixture insert though ceiling hole.

• Once through hole, let go of springs and adjust insert such that bezel is flat on ceiling. IMPORTANT: Be careful not to damage LED or Optic during installation process.

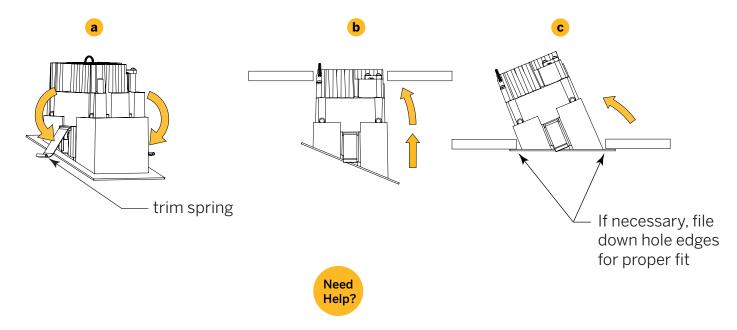

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.




3" ProTools WG-75RPTAWW-RBT WG-75SPTAWW-SBT

Installation Instructions

Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim

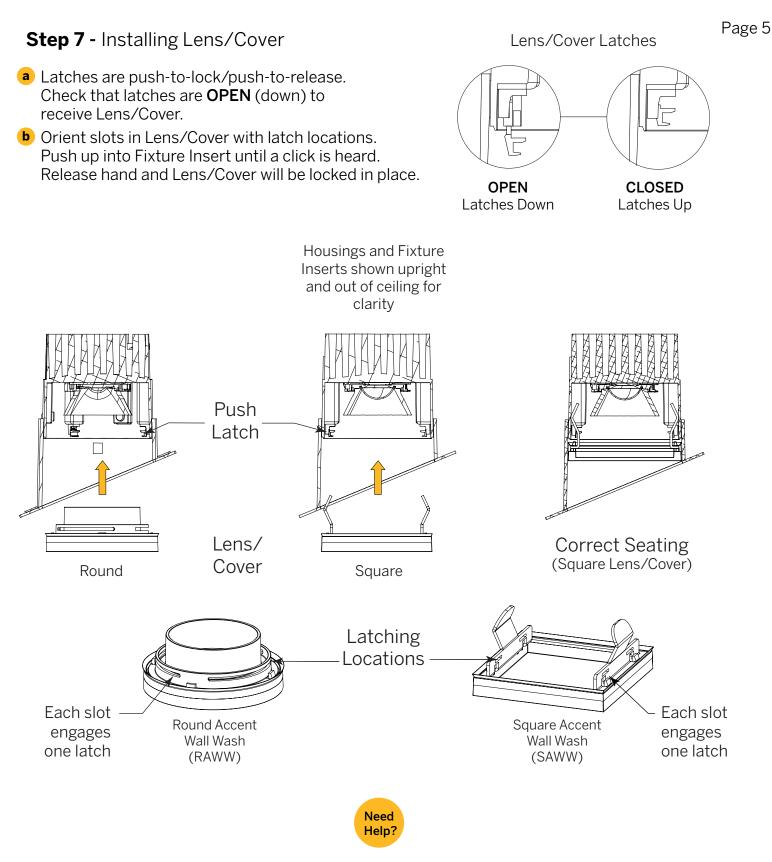

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.

