


Step 1 - Confirm Power Supply is Off!

Unpack luminaire unit. Unit ships in *two* major parts: Fixture Insert/Driver Box Assembly and Lens Cover unless Remote Driver version was supplied, then Plenum-rated cable with bare leads is also provided. In this configuration, integral conduit and driver box are not included. However, a strain relief is added to where the low voltage wires exit. Remote drivers and housings are supplied by Inter-lux.

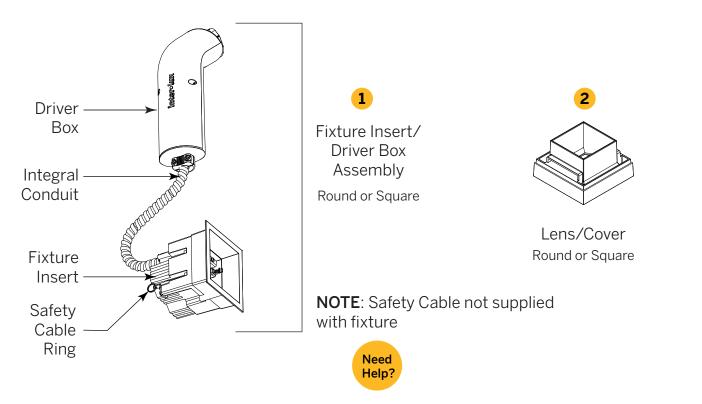



410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.



3" ProTools WG-75RPTWW-RBT WG-75SPTWW-SBT

Installation Instructions

Downlight Round and Square Wall Wash Recessed Bezel Trim


Page 2

Incoming Power and Control Cables




Cut appropriate size opening in the ceiling as shown below. Clear any insulation at least 3" from any part of the fixture or driver enclosure.

NOTE: Before Installation in dry location, remove supplied Gasket. For wet location, remove backing paper from the Gasket and adhere Gasket to inside trim.

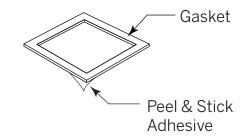

Step 3 - Wiring

a Locate Fixture Insert/Driver Box assembly.

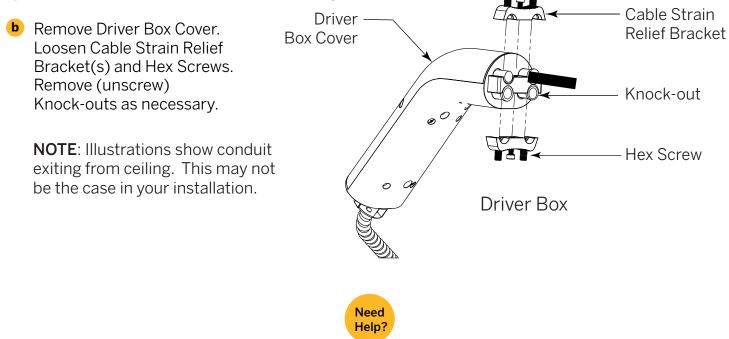



410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.




3" ProTools WG-75RPTWW-RBT

WG-75SPTWW-SBT

Installation Instructions

Downlight Round and Square

Wall Wash **Recessed Bezel Trim**

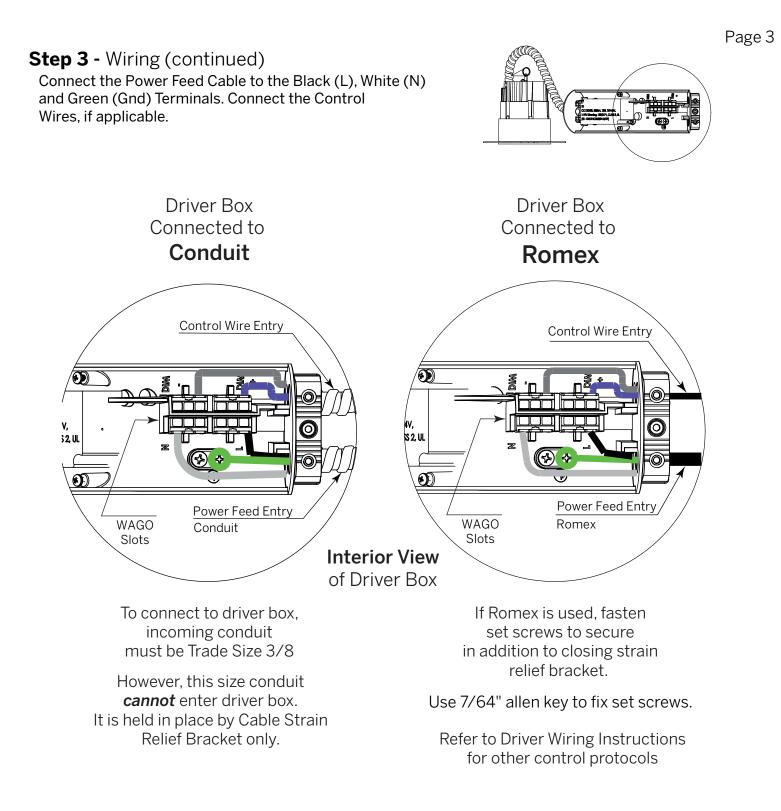







Installation Instructions


Downlight Round and Square Wall Wash **Recessed Bezel Trim**

Page 4

Wall

Wing

Direction

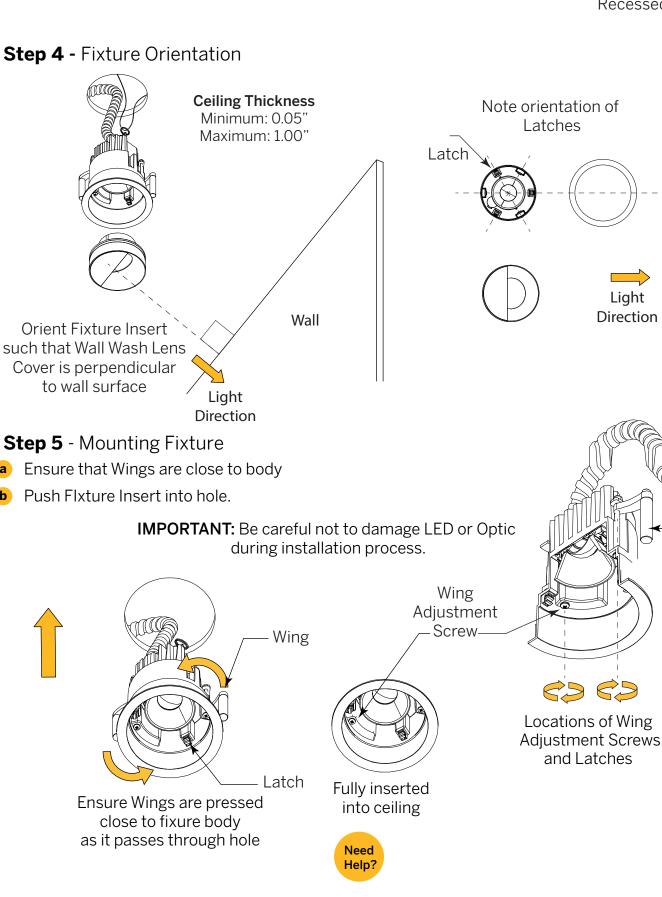

whitegoods

a

b

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.




Installation Instructions

Downlight Round and Square Wall Wash


Recessed Bezel Trim

Page 5

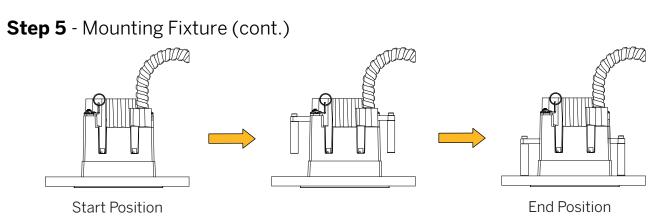

Turn Wing Adjustment Screws **clockwise** from below. Initial position shown at left. Wings are close to fixture body and raised to full height. As screws are turned, Wings swing out, lower, and clamp Fixture Insert to inside of ceiling, as shown at right.

IMPORTANT: Be careful not to damage LED or Optic during installation process.

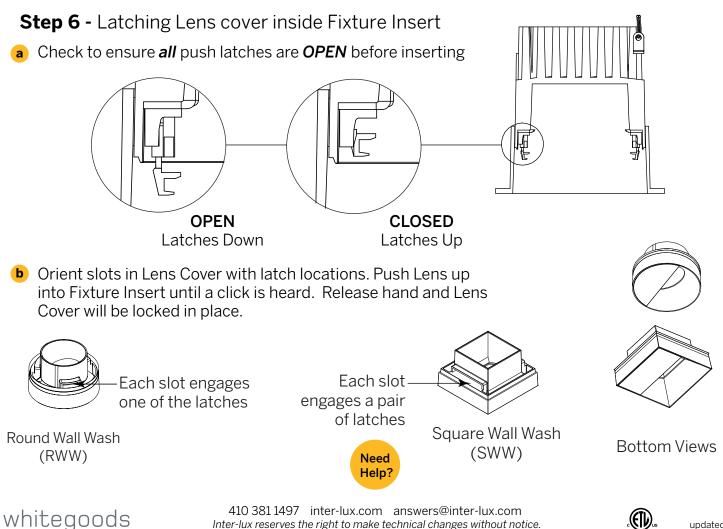

Inter-lux reserves the right to make technical changes without notice.




Installation Instructions

Downlight Round and Square


Wall Wash Recessed Bezel Trim

Page 6

Correct Seating for Round and Square Wall Wash Cover/Lenses

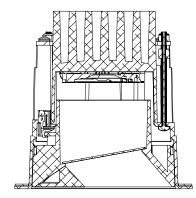

Round Wall Wash (RWW)

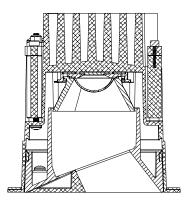

Square Wall Wash (SWW)





410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.

