

Installation Instructions

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.

Z	4	

To prevent electrical shock disconnect electrical supply before installation or servicing

blocking when necessary.

For Accessible Ceilings Only*

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide

Step 1 Confirm Power Supply is Off!

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2 **Ceiling Preparation**

Mark location and drill hole for cable pass-through

Step 3

Mount Fixture

a Center Mounting Plate around hole. Secure to ceiling with Mounting Screws or anchors. Use backing material if necessary.

b Feed cable from fixture through center of Mounting Plate and up into hole.

Slip Fixture Body over Rim of Mounting Plate. Secure by rotating clockwise. Lock into place with Set Screw.

Step 4 **Electrical Connection** Above ceiling, connect power (and

control) wire(s) to Remote Driver.

 
Remote Driver

Downlight


Round Cylinder Tall Direct Surface Mount

Included in Box

- (1) Fixture Body with connected cable
- (1) Mounting Plate
- (2) Mounting Screws
- (1) Set Screw



Cross-Section of Fixture

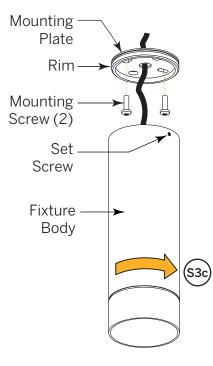

whitegoods

*Alternatively, wire or cable may be fed from an accessible driver to the

fixture in a non-accessible ceiling.

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.

Need

Help?

