


Installation Instructions

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing. **Never connect a live fixture!!!** Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

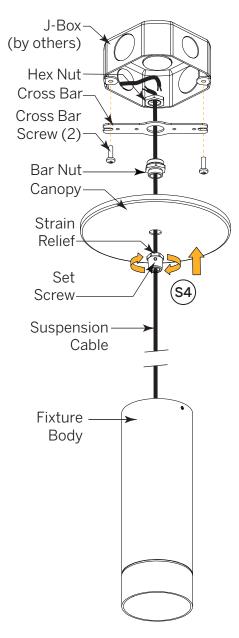

Step 1

Confirm Power Supply is Off! Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2

 Ceiling Preparation
a Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.

Screw Bar Nut to bottom of Cross Bar. Secure with Hex Nut above Bar.

Step 3

Electrical Connection

a From fixture, feed cable through Strain Relief and Canopy into J-Box.

NOTE: Hex Side of Strain Relief to contact canopy, as shown.

 Inside J-Box, connect power (and control) wire(s) using suitable connectors.

Step 4

Secure Luminaire Slide Canopy and Strain Relief up the suspension cable to the ceiling. Screw Strain Relief to Bar Nut. Lock in place with Set Screw.



. . . .

Integral Driver

 
Downlight

Round Cylinder Tall

Suspended Cable

Included in Box

- (1) Fixture Body with connected cable
- (1) Cross Bar
- (2) Cross Bar Screws
- (1) Bar Nut
- (1) Hex Nut
- (1) Canopy
- (1) Strain Relief with Set Screw



Cross-Section of Fixture

whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.