


Installation Instructions

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing. **Never connect a live fixture!!!** Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

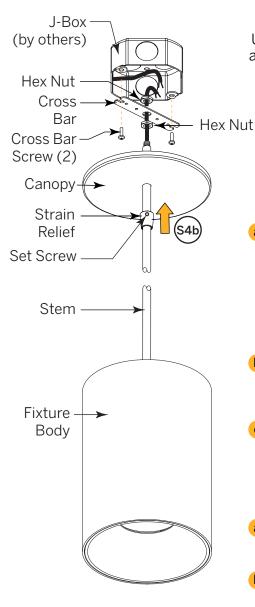

Step 1

Confirm Power Supply is Off!

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2

Ceiling Preparation Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.

Step 3 Mounting

- From Fixture Body, feed cable through stem. If stem supplied in multiple pieces, feed cable through first section and **then** through second section. Now join first to second. Repeat if needed. Screw Stem assembly to Fixture Body.
- Slide Strain Relief onto top of stem. Follow with Canopy. Screwon Hex Nut on top of Canopy.
 - Screw top of Stem to Cross Bar, followed by Hex Nut to secure.

Step 4

Electrical & Secure

- Inside J-Box, connect power (and control) wire(s) using suitable connectors.
- Slide Canopy and Strain Relief up Stem. Lock in place with Set Screw.



Included in Box


(1) Fixture Body with Integral Driver (or none, if remote driver specified) with connected cable.

Downlight

Round Cylinder

Suspended Rigid Stem

- (1-3) Stem(s) as specified
- (1) Cross Bar
- (2) Cross Bar Screws
- (2) Hex Nuts
- (1) Canopy
- (1) Strain Relief with Set Screw

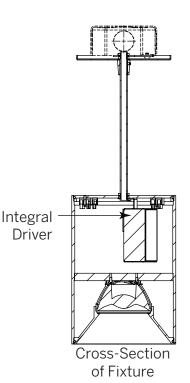

whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.

