### 4" ProTools

WG-100SPTWW-SR

J-Box

Hex Nut

Cross Bar -

Cross Bar

Screws (2)

Hex Nut

Canopy

Strain

Relief

Screw

Stem

Fixture Body

Set

(by others)

## Installation Instructions

#### **Wall Wash**

Square Cylinder Suspended Rigid Stem

**IMPORTANT:** Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.



Confirm Power Supply is Off! Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

#### Step 2

Ceiling Preparation
Mark location, cut opening,
and mount J-Box. Pull power (and
control) cable(s) inside. Attach
Cross Bar with supplied screws.

# **Step 3**Mounting

- a From Fixture Body, feed cable through stem. If stem supplied in multiple pieces, feed cable through first section and **then** through second section. Now join first to second. Repeat if needed.
- Screw Stem assembly to Fixture Body. Slide Strain Relief onto top of Stem. Follow with Canopy. Screw on Hex Nut on top of Canopy.
- Screw top of Stem to Cross
  Bar. Tighten Hex Nut
  to secure.

### Step 4


Connect Electricals & Secure

- a Inside J-Box connect power (and control) cable(s) using suitable connectors.
- b Slide Canopy and Strain Relief up the Stem to ceiling. Lock in place with Set Screw.



#### Included in Box

- (1) Fixture Body with Integral Driver (or none, if remote driver specified) with connected cable.
- (1) Cross Bar
- (2) Cross Bar Screws
- (2) Hex Nuts
- (1-3) Stem(s) as specified
- (1) Canopy
- (1) Strain Relief with Set Screw

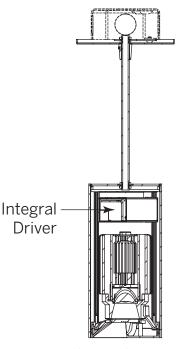

Cross-Section of Fixture





<sup>∠</sup>Wall Wash Reflector May be aimed by snapping it out

and back in

to desired direction